


Welcome

Raytheon documentation for the ATCBI-6 MSSR system is provided in PDF format on this CD-ROM.

To facilitate viewing, links are provided from this "Welcome" page to the various manual contents pages, and from there to the appropriate sections in the individual manuals.

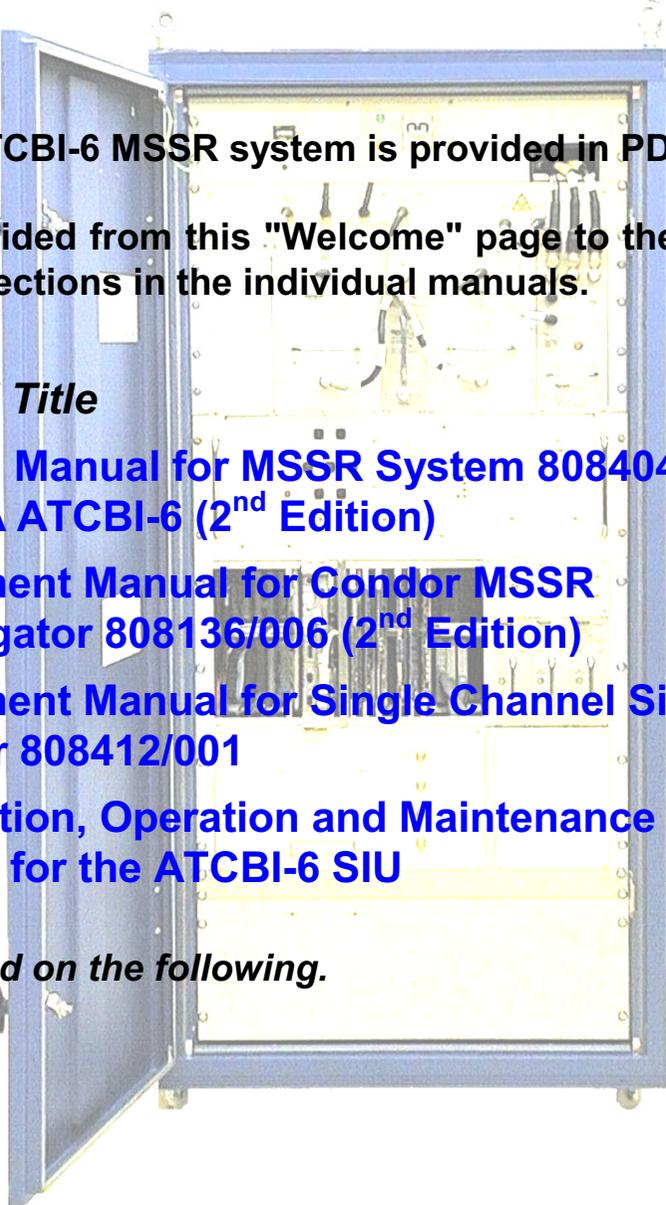

<i>Equipment</i>	<i>Manual Title</i>	<i>Manual Ref/Issue</i>
MSSR System for FAA ATCBI-6	System Manual for MSSR System 808404/001 for FAA ATCBI-6 (2nd Edition)	SYM 808404/001 (2nd Edition) Issue 2
Condor MSSR Interrogator	Equipment Manual for Condor MSSR Interrogator 808136/006 (2nd Edition)	EQM 808136/006 (2nd Edition) Issue 2
Site Monitor (PARROT)	Equipment Manual for Single Channel Site Monitor 808412/001	EQM 808412/001 Issue 4
System Interface Unit (SIU) Sensis	Installation, Operation and Maintenance Manual for the ATCBI-6 SIU	730-005599 Version 6

Additionally, information is provided on the following.

Product Support

Using Adobe Acrobat Reader

System Manual for MSSR System 808404/001 for FAA ATCBI-6 (2nd Edition)

Contents

PRELIMINARY PAGES

SECTION 1 INTRODUCTION

SECTION 2 FUNCTIONAL DESCRIPTION

Annex A Communications Cabinet

Annex B RF Changeover Assembly

SECTION 3 OPERATING INSTRUCTIONS

Annex A Control and Monitor System (CMS) –
LMT/RSCT Facilities

Annex B Control and Monitor System Terminals

Annex C CMS (LMT/RSCT) Initial Configuration

Annex D MSSR System Access for Control and Monitoring

Annex E Configuration of Controller and Maintainer Types

SECTION 4 MAINTENANCE

Annex A Interrogator Functions via CMS Transparent Mode

Annex B Desc of Dyn Parameters and Processing Switches

Annex C S/W Loading/Updating and Processor Initialisation

Annex D Removable Disk Drive Functions

Annex E Antenna Pattern Measurement

SECTION 5 PARAMETER RECORD

SECTION 6 INSTALLATION AND COMMISSIONING

Annex A Feeder Cable Phasing

Annex B Feeder Cable Insertion Loss Measurement

Annex C Feeder Cable VSWR Measurement

Annex D Monopulse Consistency and OBA Table Calibration

Annex E False Target Suppression

Annex F Description of Self Test and Synthetic Targets

Annex G Receiver Sensitivity Monitoring

Annex H Cable Details

Equipment Manual for Condor MSSR Interrogator 808136/006 (2nd Edition)

Contents

PRELIMINARY PAGES

SECTION 1 INTRODUCTION


SECTION 2 FUNCTIONAL DESCRIPTION

2.1	Interrogator	2.10	Reply Decoder PEC
2.2	Low Duty Cycle Power Amplifier	2.10A	Mode S Reply Decoder 'A' and 'B' PEC
2.2A	High Power Amplifier	2.11	Plot Extractor Processor PEC
2.3	Driver Module	2.12	Site Services Interface PEC
2.4	Tx Interface Assembly	2.13	Transmitter Power Supply
2.5	Receiver Module	2.14	Multi Output Power Supply
2.6	Rx Interface Assembly	2.15	Fan Fail PEC
2.7	Mode Generator PEC	2.16	PEC Backplane
2.7A	Mode S Mode Generator PEC	2.17	Fan and Power Supply Unit
2.8	Control and BIT PEC	2.18	Mains Switch Enclosure
2.9	Video and Timing PEC	2.19	Attenuator Unit

SECTION 3 OPERATING INSTRUCTIONS

SECTION 4 MAINTENANCE

SECTION 5 EQUIPMENT CONFIGURATION

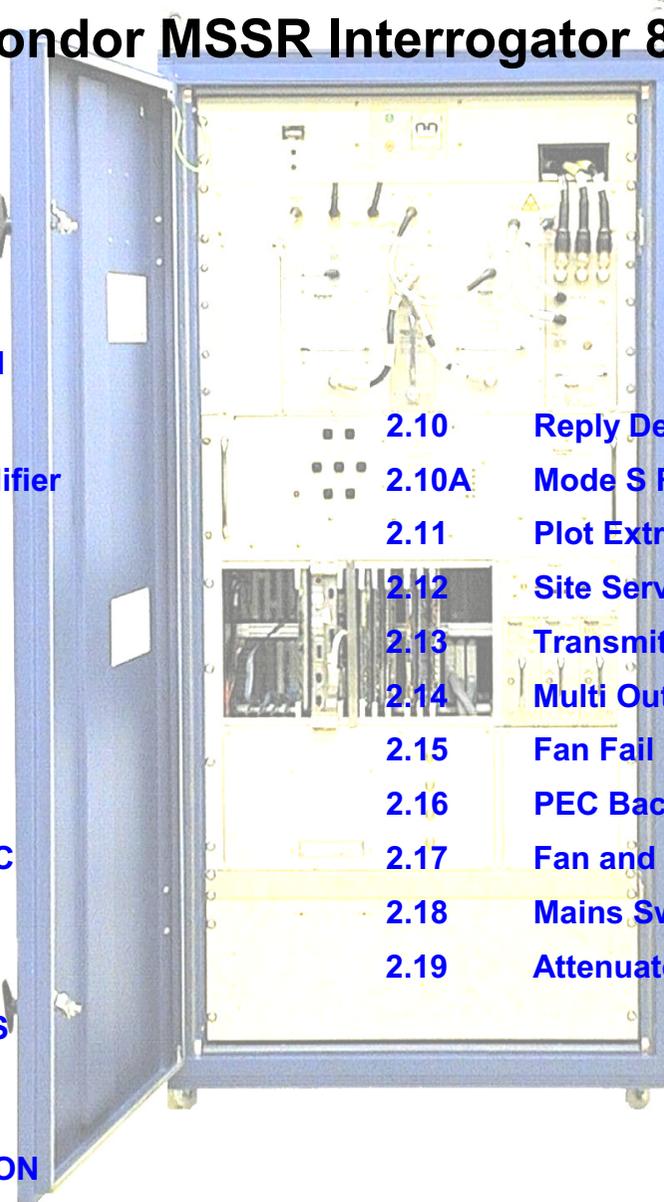

Equipment Manual for Single Channel Site Monitor 808412/001 (PARROT)

Contents

PRELIMINARY PAGES

SECTION 1 INTRODUCTION


SECTION 2 FUNCTIONAL DESCRIPTION

SECTION 3 OPERATING INSTRUCTIONS

SECTION 4 MAINTENANCE PROCEDURES

SECTION 5 EQUIPMENT CONFIGURATION


SECTION 6 INSTALLATION AND SETTING UP

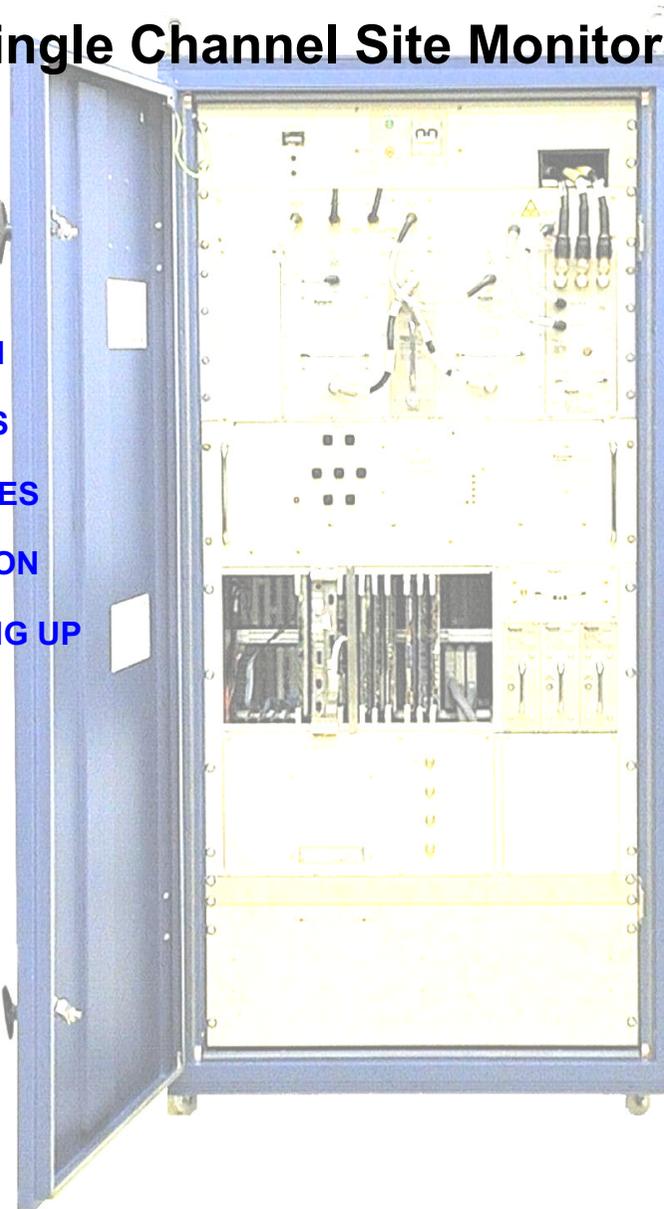

Air Traffic Control Products

Sensis System Interface Unit (SIU) Documentation

Installation, Operation and Maintenance Manual for the ATCBI-6 System Interface Unit (SIU)

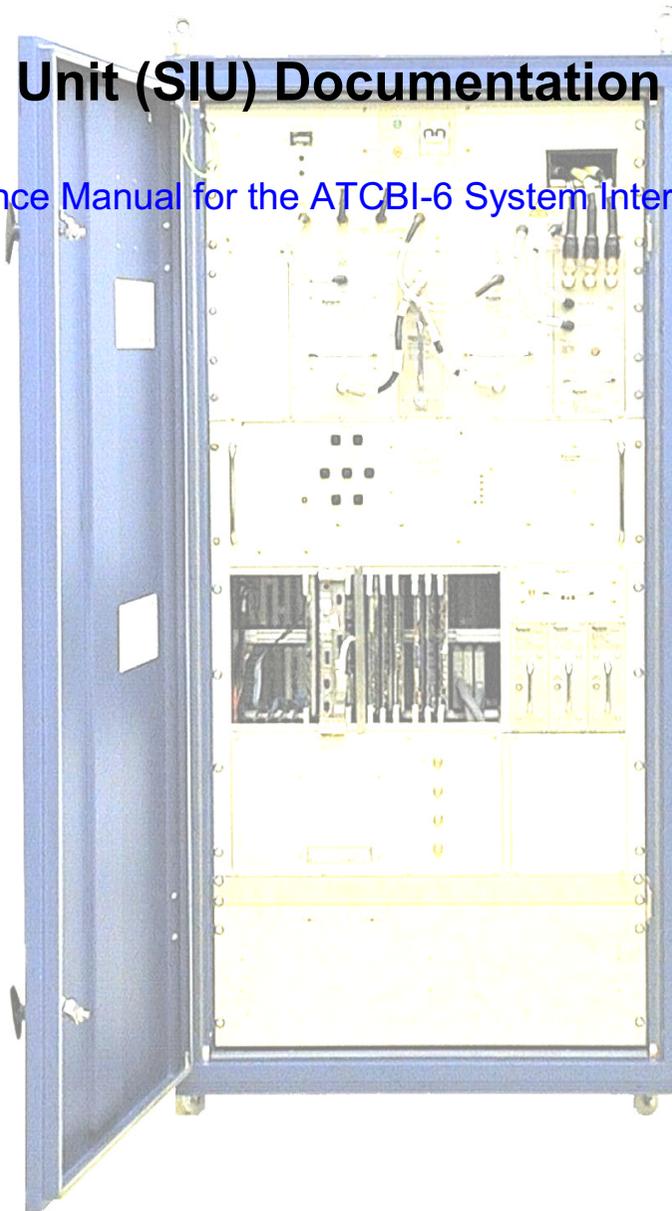

Air Traffic Control Products

PRODUCT SUPPORT

CONTACT DETAILS

For further information concerning the products and services available from Raytheon Systems Limited, please contact us at:

Raytheon Systems Limited

The Pinnacles
Harlow
Essex CM19 5BB
United Kingdom

Telephone **+44 (0) 1279 426862**
Facsimile **+44 (0) 1279 410413**
Internet **www.raytheon.co.uk**



Air Traffic Control Products

USING ADOBE ACROBAT READER

For full instructions on using the Acrobat Reader please see the Acrobat Reader Guide, which can be accessed by selecting the *Help > Reader Guide* menu option.

We recommend that you use the *File > Preferences* menu option to access the General Preferences settings. Set the Default magnification to "Fit Width" and deselect the "Open Cross-Document Links in Same Window" button. This ensures that this Welcome file remains loaded and can be accessed as soon as any opened section is again closed. Also, it is sometimes useful to display the bookmarks or thumbnails, as available; in later versions of Acrobat Reader, the F5 and F6 keys can be used to toggle on/off the bookmarks and thumbnails. Any bookmark (in the left-hand window pane) may have additional sub-headings hidden below it; expand the listing as required – the sub-headings will be listed below and indented to the right of the main heading.

To enable the user to navigate around the documents on this CD-ROM, the Welcome file contains both bookmarks and active links (coloured blue), which provide direct access to the contents list for the appropriate manual or to a particular section within one of the manuals.

When viewing a section, a thumbnail of each of the pages is shown in the left-hand window pane. If a page number is known, for example by reading the section contents list, then scroll down the left-hand pane and click on the thumbnail to display that page on screen.

If more than one section is open, use the Window menu to select the name of the file that you wish to view. If too many files are open, use the Window menu to select the name of one that you wish to close, then close that section by using the *File > Close* menu option.